




**Febco 765
Backflow
Hunt Irrigation, Inc.**
2600 West "L" Street
Suite A
Lincoln, NE 68522
Phone: 402-438-8151

Freeze Protection Guidelines

1. Go to basement (Utility Room)
2. Close main shut-off valve (Ball Valve w/ handle)
3. Open interior drain (Boiler drain w/ Tee Handle or Knob)
4. Locate vacuum breaker on the exterior of the house
5. Open test cocks **A** and **B** w/ straight screw driver (Look on diagram)
6. Leave test cocks and interior drain open all winter
7. Turn **Blue Handles** at a 45° angle to prevent freezing
8. Turn controller to the off position
9. ☐ If box is checked you have a master valve:
Cycle controller through one manual cycle
and then turn controller to the off
position
10. *Be sure to check interior drain a week
after winterization if water
continues to drain out
call for service immediately

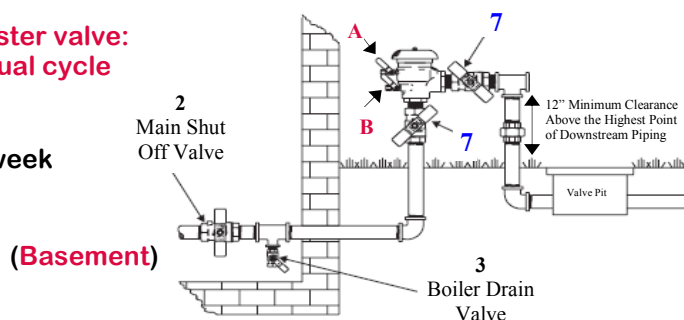

Spring Pressurization Guidelines

1. Locate vacuum breaker on the outside of the house
2. Close test cocks **A** and **B** w/straight screwdriver
3. Move **Blue Handles** from the 45° position to the fully
open position
4. Turn controller on & activate ZONE 1
5. Go to basement & close interior drain
6. Open shut-off valve (**SLOWLY**)
7. Listen for vacuum breaker to seal
(There will be a light to moderate hammering)
8. Turn controller off
9. Inspect yard & backflow
for any leaks.
10. Program controller
for Spring schedule

