


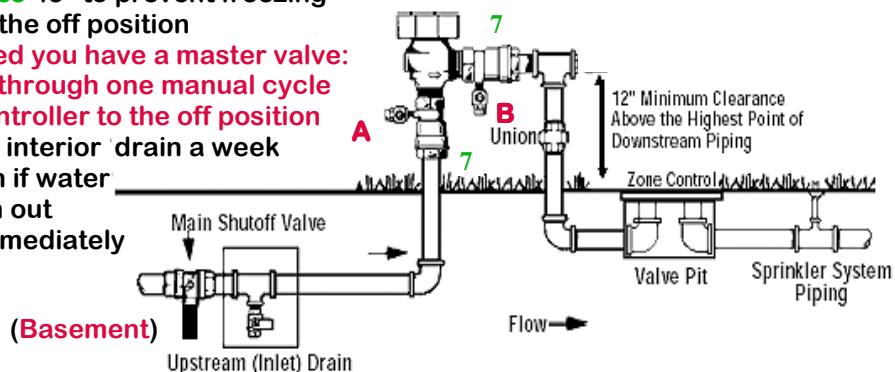

Watts 800M4FR
Backflow
Hunt Irrigation, Inc.
 2600 West "L" Street
 Suite A
 Lincoln, NE 68522
Phone: 402-438-8151

Freeze Protection Guidelines

1. Go to basement (Utility Room)
2. Close main shut-off valve (Ball Valve w/ handle)
3. Open interior drain (Boiler drain w/ Tee Handle or Knob)
4. Locate vacuum breaker on the exterior of the house
5. Open test cocks **A** and **B** w/ straight screw driver (Look on diagram)
6. Leave test cocks and interior drain open all winter
7. Turn **Green Handles** 45* to prevent freezing
8. Turn controller to the off position
9. If box is checked you have a master valve:
 Cycle controller through one manual cycle
 and then turn controller to the off position
10. *Be sure to check interior drain a week
 after winterization if water
 continues to drain out
 call for service immediately



Spring Pressurization Guidelines

1. Locate vacuum breaker on the outside of the house
2. Close test cocks **A** and **B** w/straight screwdriver
3. Return **Green Handles** to fully open position
4. Turn controller on & activate ZONE 1
5. Go to basement & close interior drain
6. Open shut-off valve (SLOWLY)
7. Listen for vacuum breaker to seal
 (There will be a light to moderate hammering)
8. Turn controller off
9. Inspect yard & backflow
 for any leaks.
10. Program controller
 for Spring
 schedule

